



70cc-160cc Valve Adjustment Instructions

You will need a few tools to do the adjustment and a .005 feeler gauge.

Take off the valve covers. There is one on the top and bottom of the head. You will see the adjuster tappet sticking up thru the rocker arm and a lock nut tightened down on it.

Undo the locknut and put the feeler gauge in between adjuster tappet and top of valve stem. Wind down the adjuster tappet to the point of contact, back off quarter of a turn, and tighten locknut. Check resistance on feeler gauge and repeat process for the other valve. You should be able to move the feeler gauge in and out with a small amount of resistance.